



Talley® Manufacturing, Inc.

9183 Old No. 6 Hwy

PO Box 369

Santee, SC 29142

803-854-5700

[www.TALLEYRINGS.com](http://www.TALLEYRINGS.com)

## FIXED SCOPE RING ASSEMBLY INSTRUCTIONS


### Assembly instructions:

1. Disassemble all parts of scope ring. Take care to identify all included parts.
2. Affix Base plate (#C) to rifle unless rifle is equipped with Dovetail Receiver.
3. Place parts (#A) & (#B) around scope tube.
4. Install Ring assembly and scope tube on Base (#C) or Dovetail Receiver.
5. Insert screw (#2) and tighten to 30in/lbs.
6. Repeat with 2<sup>nd</sup> ring assembly.
7. This will secure the rings on the rifle. You can square up the scope reticle and adjust for proper eye relief.
8. Insert top screw (#1) and tighten to 20in/lbs.



### Parts List

- #A – Scope ring 1
- #B – Scope Ring 2
- #C – Base Plate
- #1 – #8-40x1/4" Torx
- #2 – #10-32x5/8" Torx

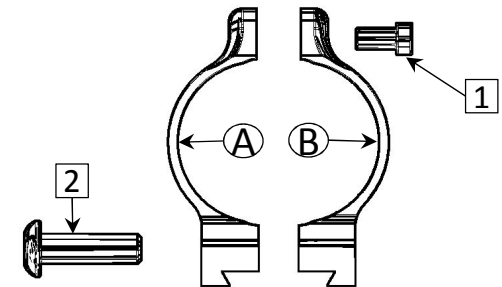

Diag. 1

**Disclaimer:** Always make sure your torque wrench is calibrated. Talley Mfg. is not responsible for damage caused to scopes due to over-torquing.

KEEP ALL ASSEMBLY NUMBERS, APPEARING ON THE BOTTOM OF THE RING, TOGETHER.

**For Technical Assistance, please call Talley, Mfg. @ 803-854-5700**

Copyright 2017, Talley Manufacturing, Inc.

